


## Instructions

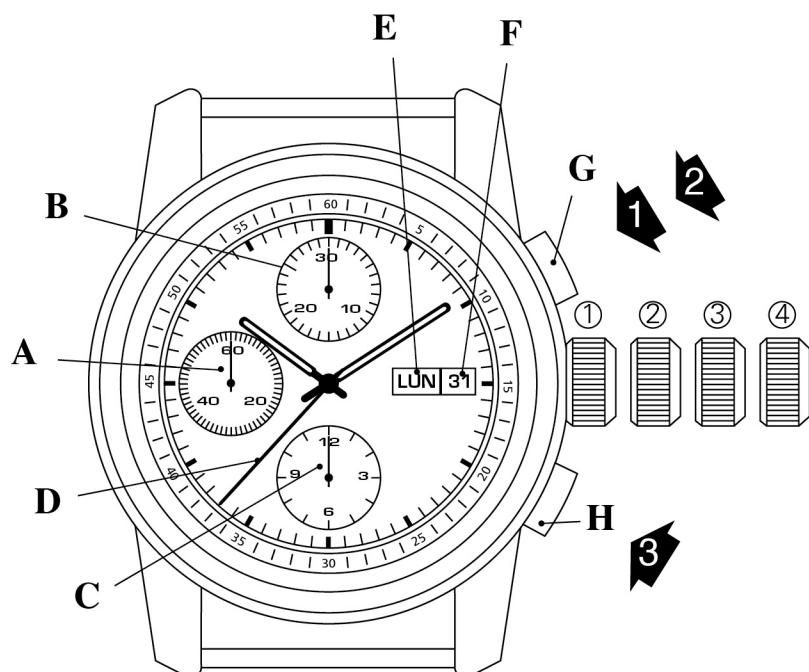

### Legend

- A: second hand of watch
- B: 30-minute counter of chronograph
- C: 12-hour counter of chronograph
- D: 60-second counter of chronograph
- E: week-day indication
- F: date indication
- G: push-button to start and stop the chronograph
- H: push-button to reset chronograph hands to zero

### Crown

Revue Thommen chronographs are fitted with a screw-in crown. Before being able to make any adjustments on your watch, the crown must be unscrewed. To do so, please proceed as follows:

- I. Turn the crown counter clockwise until it disengages from the thread and is no longer in contact with it.
- II. The crown is now in pos. 2 and it can, if needed, be pulled out to pos. 3 resp. 4.
- III. To bring back the crown to its initial position (pos. 1), return first to pos. 2. Then, by pushing against the case and at the same time turning it tightly clock-wise, the crown will be screwed-in again.

**Crown in pos. 1:** Initial position

**Crown in pos. 2:** Winding position

First, wind your watch manually by turning the crown clockwise several times. Afterwards, your watch will automatically be wound by every wrist movement.

**Crown in pos. 3:** Instant adjustment of day (E) and date (F)

Turn the crown counter clockwise until the correct week-day is set. Then, turn it clockwise to set the date.

**Important:** Do not adjust the week-day and the date between 8 p.m. and 1 a.m. During that period, several complex operations take place and any outside interference may damage the movement.

**Crown in pos. 4:** Exact time setting, standstill of watch (D)

Turn minute and hour hand until the exact time is set. If the hour hand passes midnight, the date indication jumps one day forth.

### Chronograph function:

Push-button G:     1<sup>st</sup> push = start  
                              2<sup>nd</sup> push = stop

Push-button H:     3<sup>rd</sup> push = return of chronograph hands to zero (B, C, D)